




Science.
Applied to Life.™



**Superior Anti-Fog Coating.
Applied to help you see
clearly for longer.**

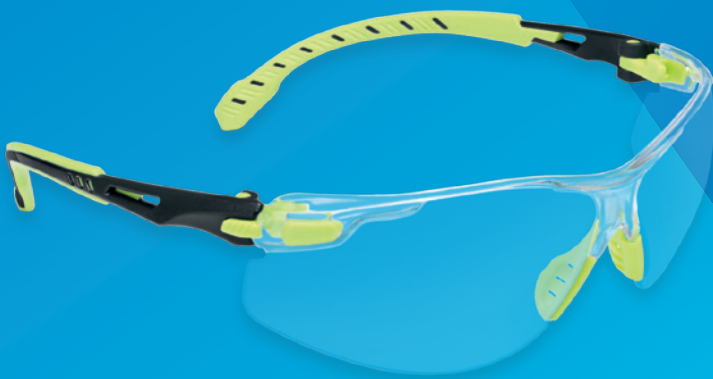

3M™ Scotchgard™ Anti-Fog Coating Technology – superior performance safety eyewear.

Clearly better anti-fog performance.

A fogged lens can be frustrating and dangerous. Removing eyewear to wipe away fog can expose eyes to potentially dangerous workplace impact hazards and debris. 3M Scotchgard anti-fog coating resists fogging for longer than traditional anti-fog coatings, outperforming the N marking requirements of EN166 by 5x*, even after up to 25 washes.

See what you've been missing.

3M Scotchgard anti-fog coating is now available on 3M™ Solus™ 1000 Series Safety Eyewear in a range of lens colors (clear, grey or amber).

Other features include removable temples, soft nose bridge, optional elastic strap, padded temples for added comfort, and vented, removable foam insert to help reduce eye exposure.



3M Scotchgard anti-fog coating is also available on the 3M Goggle Gear 500 Series with a low-profile design, adjustable strap and optional prescription insert. All come with polycarbonate lenses, which absorb 99.9% of UV rays.


Help workers see clearly, longer.

3M Scotchgard Anti-Fog Coating is designed for working in challenging situations such as:

- Hot & humid conditions
- Indoor & outdoor work
- Physically demanding tasks
- Climate-controlled areas



The science behind 3M™ Scotchgard™ Anti-Fog Technology.

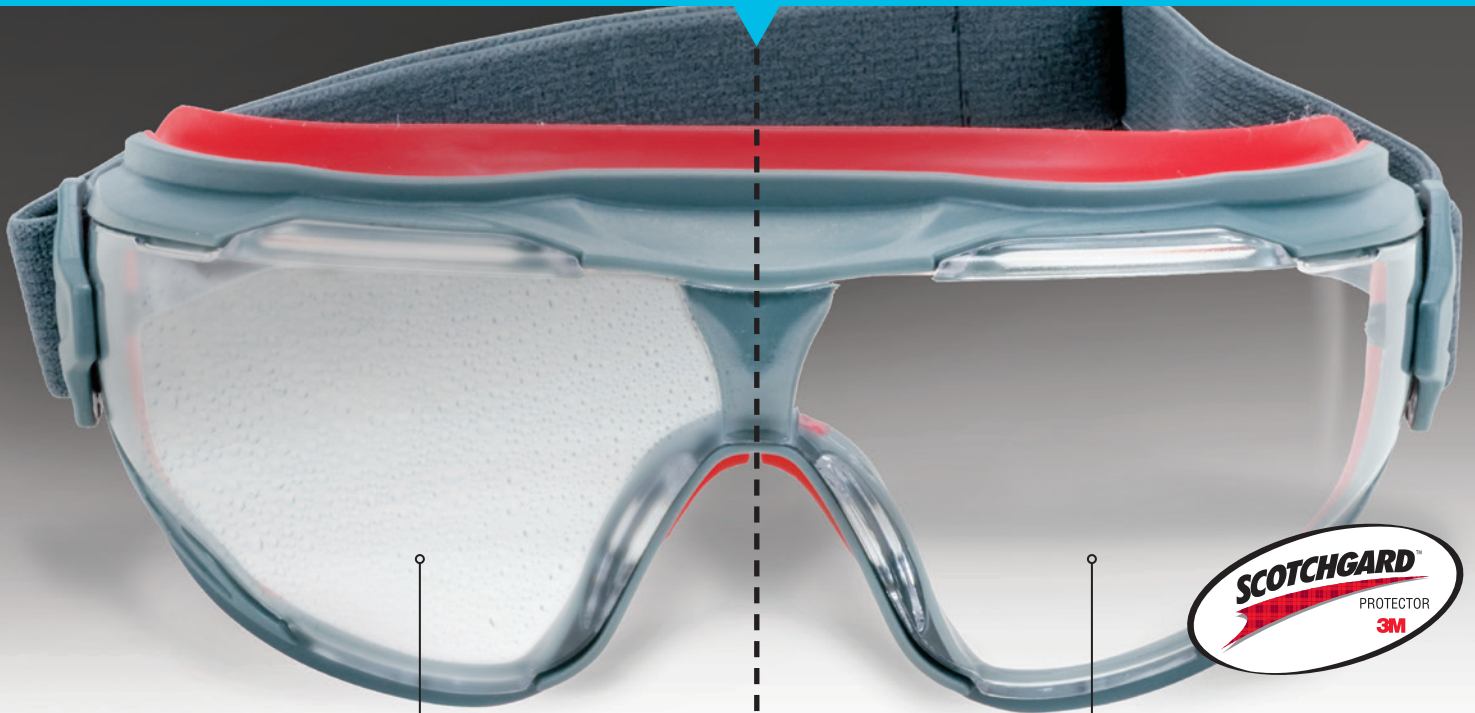

Uncoated

When microscopic water droplets land on the lenses, they bead up and form condensation and fog, obscuring your vision.



3M Scotchgard coated

3M Scotchgard anti-fog coating produces a reduced-contact angle, flattening the water beads into a thin, transparent film of water that allows light to pass through.



The facts are clear:

- 3M Scotchgard Anti-Fog Coating lasts longer than traditional anti-fog coatings, **outperforming the N marking requirements of EN166 by 5x***.
- 3M Scotchgard anti-fog coating provides **scratch resistance** to increase eyewear durability in working environments, complying with the K marking requirements of EN166.
- The coating retains its effectiveness for at least 25 washes **for improved longevity**. The coating can be disinfected with diluted bleach soaking or alcohol wipes without losing its anti-fog performance.

* Based on 3M internal testing per EN168 test method.



Get out of the fog with a new family of eyewear.

▶ 3M™ Solus™ 1000 Series Eyewear

Kit: Blue/Black frame, clear lens



Kit: Green/Black frame, clear lens



Product Code	Product Description	MOQ
S1101SGAFKT-EU	SOLUS S1101SGAFKT-EU Blue/Blk Kit Clear	20
S1101SGAF-EU	SOLUS S1101SGAF-EU Blue/Black PC Clear	20
S1102SGAF-EU	SOLUS S1102SGAF-EU Blue/Black PC Grey	20
S1103SGAF-EU	SOLUS S1103SGAF-EU Blue/Black PC Amber	20

Product Code	Product Description	MOQ
S1201SGAFKT-EU	SOLUS S1201SGAFKT-EU Green/Black Kit Clear	20
S1201SGAF-EU	SOLUS S1201SGAF-EU Green/Black PC Clear	20
S1202SGAF-EU	SOLUS S1202SGAF-EU Green/Black PC Grey	20
S1203SGAF-EU	SOLUS S1203SGAF-EU Green/Black PC Amber	20

Product Code	Product Description	MOQ
Solus 1000G-EU	SOLUS Accessories Foam Insert	5
Solus 1000S-EU	SOLUS Accessories Headband	5

▶ 3M Goggle Gear 500 Series

Clear Prescription Insert



Product Code	Product Description	MOQ
GG501SGAF-EU	Goggle Gear 501 PC Clear	10
GG500PI-EU	Goggle Gear 500 Prescription Insert	10

Alternate lens options for Solus series

Grey Amber



Fitting Instructions

Attach headband to Solus



Attach temple to Solus



Attach foam insert to Solus



Attach prescription insert to Goggle Gear



Accessories/Replacements for Solus Series

Foam Insert/Headband



Foam Insert has small vents to help reduce fogging

For more information and to request a **FREE** trial, visit www.3M.co.uk/Scotchgard_AntiFog

Personal Safety Division
3M United Kingdom plc
 3M Centre
 Cain Road, Bracknell
 Berkshire RG12 8HT
 t: 0870 60 800 60
www.3M.co.uk

3M Ireland Limited
 The Iveagh Building
 The Park, Carrickmines
 Dublin 18
 t: 01 280 3555
 f: 01 280 3509

Please recycle.
 Printed in the UK. 3M and Scotchgard are trademarks of the 3M Company.
 © 3M 2016.
 All rights reserved.
 J319677

